

# JD 851 Laser Pointer Manual



- ① Install star cap to project patterns, and take off star cap to be a single dot laser.
- ② On/Off button.
- ③ Mind the battery type and direction.
  - Green laser: 1x16340 batteries. Positive side face to the button.
  - Red laser and Violet laser: 1x16340 batteries. Positive side face to the spring.

## Technical Specs

Name	JD 851 Laser Pointer	
Size	13*2*2 cm	
Laser Class	Class 3	
Laser Type	Direct Diode	
Wavelength	532nm green	650nm red
Output Power	<40mw	100mw
Beam Divergence	2.4mRad	1.2mRad
Beam Diameter At Aperture	1.5mm At Aperture <13mm at 10 meters	4mm At Aperture <8mm at 10 meters
Laser Body	Aircraft-Grade Aluminum	
Laser Finish	Black	

Modes	Single On/Off Continuous Mode
Power Supply	1*16340 3.7V Lithium-Ion Rechargeable Battery
Weight	0.07kg

**Important things:**

1. Must use safety goggles.
2. Don't light up over 2 minutes each time, totally cool down before you use it again, if or, it may be damaged by overheated.
3. Keep away from children, don't direct to eyes. User is responsible for any improper using way.